 


# Operating the HEPA 500 Air Scrubber


**1** Unwrap cord and plug unit into suitable outlet.

---



**2** Remove front opening cap

---

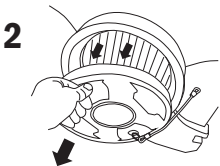

**3** Press switch to **ON** position.  
**ADJUST** for desired airflow with control knob. Use higher speeds for larger spaces or heavy amount of dust in air.


---

**4** Turn off and unplug unit when moving the unit or changing filters

---

**5** Equipped with circuit breaker.  
If tripped, press Reset switch.

See Owner's Manual for important safety information and operating instructions.

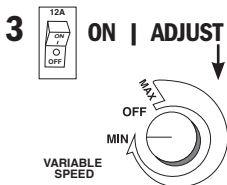

## FILTER TIPS:

---

- Replace pre-filters when dust accumulation is visible on filter surface.
- Replace HEPA filter when change filter light is on.




**OVER**


# CHANGING FILTERS

REPLACE FILTERS AS NEEDED. REMOVE, BAG & DISPOSE OF ALL FILTERS BEFORE RETURNING THE HEPA 500 TO HOME DEPOT.

For Filters #1 and/or #2, unclamp front panel and insert the front slot.

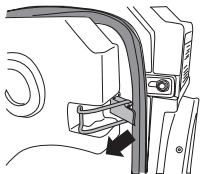

To replace Filter #3 (HEPA) inside unit, remove cover bolts with socket wrench and lift off filter compartment cover.

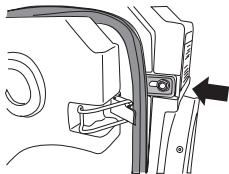

FILTERING NEEDS	FILTER #1	FILTER #2	FILTER #3 (HEPA)
Dust removal or basic air scrubbing on construction or remodeling sites.	Stage One Pre-Filter (F270)	Stage Two Pre-Filter (F271)	HEPA filter (F321 or F513)
Odor control plus air filtration to remove food odors, fumes from paint, varnish and paint thinners, sewer odors, dead animals and many other noxious odors.	Activated Carbon Filter (F397)	Stage Two Pre-Filter (F271)	HEPA filter (F321 or F513)



Go to [HD.drieaz.com](http://HD.drieaz.com)

for instructional videos and user guides.

Or call **800-932-3030** for technical support

